


Decalcification cartridges



Technical Specifications

- Size (MMP): 300 mm x 66mm Ø
- Size (HI/UCE): 280 mm x 66mm Ø
- Product Weight: 195g
- Diameter in-/outlet: 1/4" (6.35 mm)
- Material of filter: Citric acid
- Material of casing: Polypropylene copolymer
- Max. pressure: 1 - 5 bar
- Available Temp.: 4 - 30° C

How to use

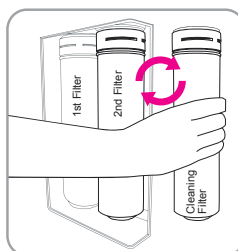

1. Separation 2nd filter (green label) and connection TYENT CLEANING FILTER in 2nd filter

MMP series direction: connection (CW), Separation (CCW)
 HI / UCE series direction: connection (CCW), Separation (CW)

*CW : clockwise *CCW : counterclockwise.

Caution: No need to change the 1st filter (Blue label)

2. Run unit on the H₂O cycle only for 5 minutes and stop.
3. Leave machine for 3 hours without any operating.
4. After 3 hours later, Separation TYENT CLEANING FILTER and connection 2nd filter you used.
5. Run unit on the H₂O cycle for 5 minutes to wash filter inside with clean water.
6. Check pH levels of machine, flow rate and pH levels should return to normal. If not, repeat 1. through 5.

Note: when cleaning machine with TYENT CLEANING FILTER, be sure to always use the H₂O purified water level only, do not use any other level while cleaning or damage could occur.

Note: If unit was subject to hard water conditions, an Anti Scale filter should be connected. This filter will prevent scale build up on plates.

TYENT WATER IONIZER CLEANING FILTER is a disposable filter



Baeck GmbH & Co. KG
 Langenharmer Weg 223 - 225 • 22844 Norderstedt • Germany
 Tel: +49 40 - 521 706 42 • Fax: +49 40 - 525 3041
 E-Mail: info@tyent-europe.com • Internet: www.tyent-europe.com

